

苏州和琦电气有限公司

Suzhou Heqi Electric Co., Ltd

电话 Tel: 13656231623

网址 Web site: www.heqitech.com

产品规格书

Specification

产品名称 Product Name		高压直流继电器 High Voltage DC Relay	
产品型号 Product Model		HEVR5V-20E	
发布日期 Publish Date		2022.10.15	
生产厂家 Production Plant		苏州和琦电气有限公司 Suzhou Heqi Electric Co., Ltd	
版本 Version		Version 1.0	
和琦电气审核签字 Signature by HEQI			顾客确认 Custom Approval
拟制 Make	审核 Check	批准 Approval	
特别说明： 1. 此规格书请顾客在 2 周内确认，如未在规定时间内答复，则视为同意。 2. 自提供规格书之日起 2 年内，顾客没有下单订货，本规格书失效。 Especially claim: 1.This specification is expected to be checked within 2 weeks. Without feedback after 2 weeks, HEQI will take it as granted that customer approves of this specification. 2.This specification will be invalid if no order within 2 years.			

变更履历

Revisions Record

变更 版本 Version No.	变更 日期 Change Date	变更内容 Description	原因 Reason	负责人 By
V1.0	2022.10.5	/	新增 Creation	张平年

技术参数

Technical Parameter

一、线圈额定参数 Coil Rating

at -40 °C~85 °C

额定电压 Rate Voltage Vd.c.	线圈形式 Coil Type	吸合电压 Operate Voltage Vd.c.	释放电压 Release Voltage Vd.c.	线圈电阻 Coil Resistance	线圈功耗 Coil Power W (at 23°C) 大约 Approx.
12V	单线圈 Single Coil	≤9	≥1.2	48×(1±7%)	3
24V	单线圈 Single Coil	≤9	≥1.2	192×(1±7%)	3

二、触点参数 Contact Specification


触点形式 Contact Arrangement	1 组常开 1 Form A	
触点材料 Contact Material	银合金 Silver Alloy	
接触电阻 Contact Resistance	≤5 mΩ (at 1 A)	
触点额定负载 Contact Rating	20 A (at 4 mm ² wire)	
最大分断电流 Max. Breaking Current	30A/450Vd.c. (5 ops)	
最大切换电压 Max. Switching Voltage	800 Vd.c.	
最小适用负载 Min. Applicable Load	6Vd.c./1A	
电流耐受 Current Endurance	电流 Current	时间 Duration
	20A	持续/ Cont.
	30A	1h
	80A	30s
	120A	10s
	200A	0.6s

注Note: 电流耐受条件Condition for current endurance

1) 环境温度Ambient temperature: 85 °C;

2) 线圈激励电压为线圈额定电压; Supply rated voltage to coil;

3) 使用 4 mm² 线径铜导线连接。The cross section area of wire is 4 mm².

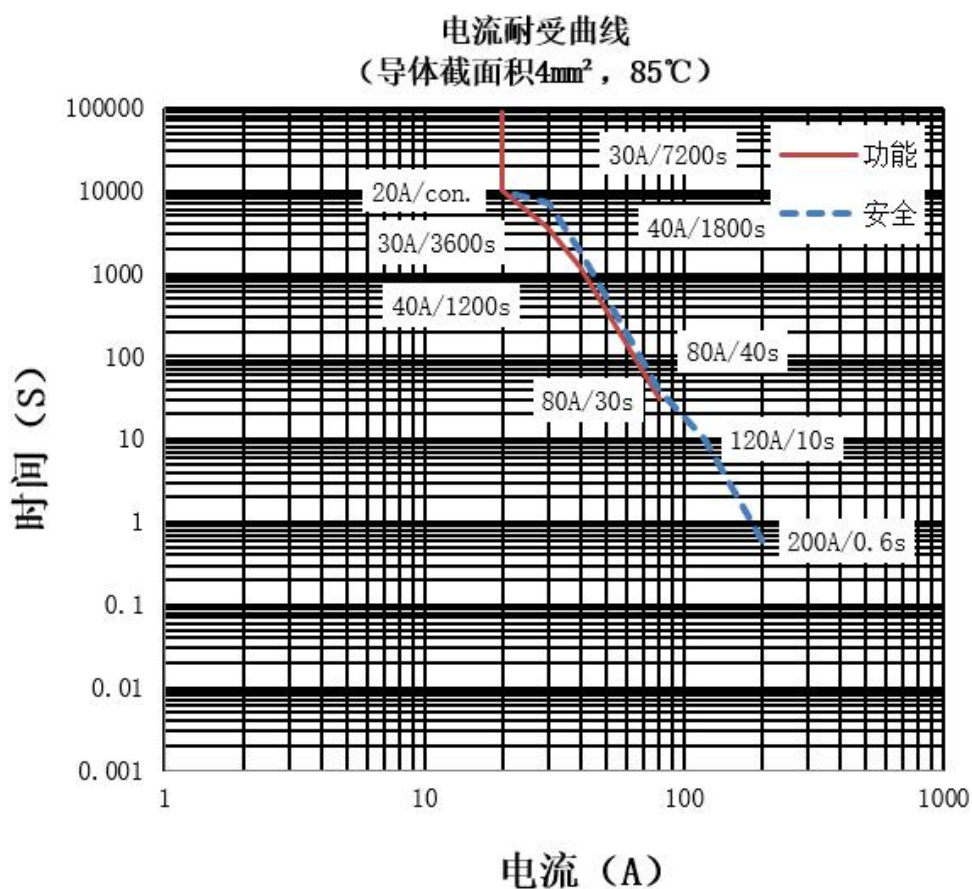

三、 耐久性 Endurance

3.1 电耐久性 Electrical Endurance

HEVR6V-20E
接通 Making: 800Vd.c./20A 7.5×10^4 次(ops)
通断 Switching: 450Vd.c./20A 3×10^3 次(ops)

注Note: 测试条件Test condition: 常温Room Temperature、通断比Switching profile 0.6s:5.4s

3.2 机械耐久性 Mechanical Endurance

线圈电压 Coil Voltage	12Vd.c.
通断比 Switching Profile	0.6s ON/ 5.4s OFF
触点负载 Contact Rating	无负载 No Load
机械寿命 Mechanical Life	2×10^5 次

四、 绝缘电阻 Insulation Resistance

断开触点间 Between open contacts	试验前 Before Test: $\geq 1000 \text{M}\Omega (@1000 \text{Vd.c.})$
	试验后 After Test: $\geq 50 \text{M}\Omega (@1000 \text{Vd.c.})$
线圈引出端与触点引出端之间 Between contact and coil	试验前 Before Test: $\geq 1000 \text{M}\Omega (@1000 \text{Vd.c.})$
	试验后 After Test: $\geq 50 \text{M}\Omega (@1000 \text{Vd.c.})$

五、 介质耐压 Dielectric Strength

断开触点间（漏电流 $<1\text{mA}$ ） Between open contacts (Leak Current $< 1 \text{mA}$)	试验前 Before Test: $\geq 3000 \text{Va.c.}, (50/60 \text{ Hz } 1\text{min})$
	试验后 After Test: $\geq 2250 \text{Va.c.}, (50/60 \text{ Hz } 1\text{min})$
线圈引出端与触点引出端之间 （漏电流 $<1\text{mA}$ ） Between contact and coil (Leak Current $< 1 \text{mA}$)	试验前 Before Test: $\geq 2500 \text{Va.c.}, (50/60 \text{ Hz } 1\text{min})$
	试验后 After Test: $\geq 1875 \text{Va.c.}, (50/60 \text{ Hz } 1\text{min})$

六、 时间参数 Time

吸合时间 Operate Time	$\leq 30 \text{ms}$
释放时间 Release Time	$\leq 10 \text{ms}$
回跳时间 Bounce Time	$\leq 5 \text{ms}$

七、 机械冲击、随机振动 Mechanical Shock and Vibration

机械冲击-强度 Mechanical Shock-Destructive	588 m/s^2
机械冲击-稳定性 Mechanical Shock-Functional	闭合 ON: 588 m/s^2 断开 OFF: 196 m/s^2

随机振动 Vibration	10-500Hz, 49m/s ²
----------------	------------------------------

八、 标准测试条件 Standards Test Condition

温度 Temperature	23 °C±5 °C
湿度 Humidity	25%~75%RH
方向 Direction of Measurement	任意 Random

九、 使用条件 Operating Condition

触点允许的最高温度(长时)Maximum allowable temperature of contacts (long-term)	130°C
触点允许的最高温度(短时)Maximum Allowable Temperature of Contacts (short-term)	180°C
温度 Temperature	-40°C~+85°C
湿度 Humidity	5%~85%RH
海拔 Altitude	≤4000m
安装方向 Installation Direction	任意 Random

十、 贮存条件 Storage Condition

温度 Temperature	10°C~75°C
湿度 Humidity	5%~95%RH


十一、 产品型号命名规则 Product Names and Type Rules

	HE	VR5	V	-20	E
公司名称 Company	HE: HEQI				
密封类型 Seal type	VR5:非密封系列				
应用场合 Application	V: 新能源汽车 Electric Vehicle				
产品容量 Capacity	20:20A				
产品系列	E: E 系列				

十二、 产品结构 Configuration

12.1 外形尺寸 Outline Dimensions

产品型号: HEVR5V-20E

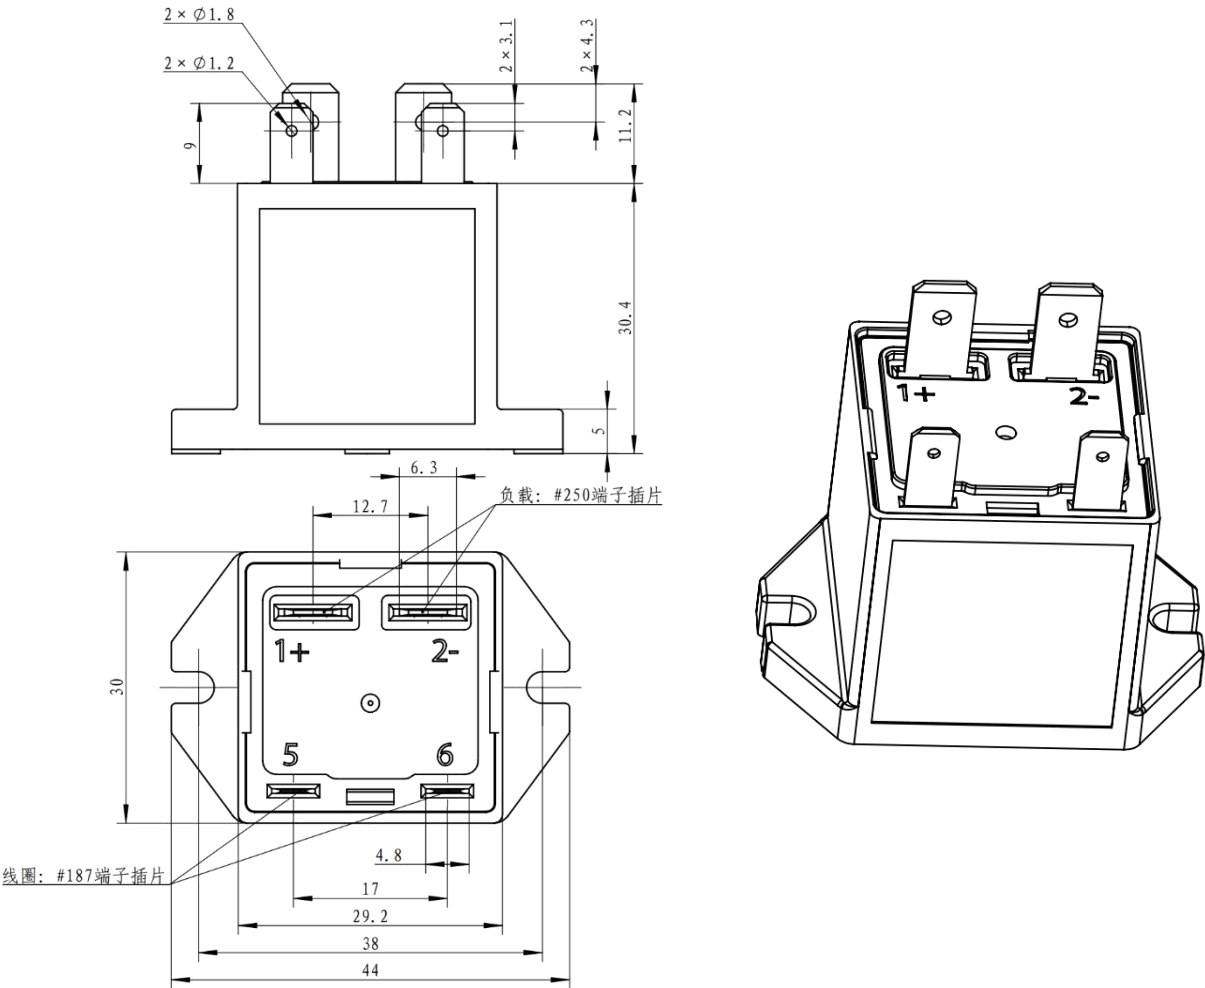

注 Note:

1) 产品外形尺寸未注公差参照下表执行。

Undeclared dimensional tolerance according to following table.

尺寸 Dimension(mm)	<10	10~50	>50
公差 Tolerance(mm)	±0.3	±0.5	±0.8

十三、 其他说明Others

13.1 供应商: 苏州和琦电气有限公司

Supplier: Suzhou Heqi Electric Co., Ltd

- 13.2 规格书内的各项性能参数是基于标准测试条件下测得的初始值。
All the performance data listed in the data sheet are the initial values tested under standard testing condition.
- 13.3 触点请避免附着异物、油脂类及腐蚀性液体，否则会导致接触器触点端发热异常。
Please avoid foreign bodies, grease or corrosive liquids in the terminal, otherwise it will lead to abnormal heating at contact terminals.
- 13.4 请避免在强磁界（变压器、磁铁的周围）和发热物体的附近安装。
Please avoid installation in strong magnetic field (around the transformers、the magnet) and the heating objects nearby.
- 13.5 防止出现松动，继电器安装时请使用垫圈。继电器安装处请使用 M3 螺钉，螺钉锁紧扭矩请控制在 $0.8\text{ N}\cdot\text{m}\sim 1\text{ N}\cdot\text{m}$ ；在超过范围的情况下，可能会造成破损。
In order to prevent loosening, please use the washer when installing the relay. Please use the M3 screws to install relay, screw locking torque within $0.8\text{ N}\cdot\text{m}\sim 1\text{ N}\cdot\text{m}$; Damage may occur when it is beyond the range.
- 13.6 触点额定值均为阻性负载时的数值，使用 $L/R\geq 1\text{ ms}$ 的感性负载（L 负载）的情况下，请与感性负载并行采取浪涌吸收措施。未采取措施的情况下，可能会造成电气寿命下降、发生切断不良。
The rating load of contact is resistive load. Please assure the surge absorption device together with inductive load when using the $L/R\geq 1\text{ ms}$ inductive load (L Load), otherwise it may lead to the decrease of electrical endurance and defective switch.
- 13.7 在继电器坠落的情况下，原则上请不要再使用。
In principle, please do not use it when the relay has fallen down.
- 13.8 和琦产品均符合RoHS要求。
HEQI products are all RoHS compliant.
- 13.9 和琦保留对产品更改的权利，顾客购买产品前请确认规格书版本。
HEQI reserves the right to change the product. Customers should confirm the version of the specification before purchasing the product.
- 13.10 如需获取更多信息与支持，请联系苏州和琦电气有限公司。
Please contact HEQI for more information or support.

